

This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment.

1. Please carefully read the manual before beginning the installation process !
2. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant.
3. DO NOT USE any kind of alcohol or alcohol derivatives with this reservoir or the acrylic tube may crack and fail ! Do not clean it using alcohol either !

Parts List

Fitting X 6




Wrench X 1




Installation Guide


- 1** Dismantle the fitting by using the wrench.

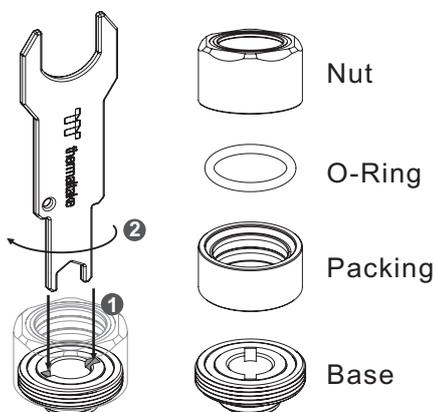


- 2** Install the base part of the fitting on the inlet/outlet you want.

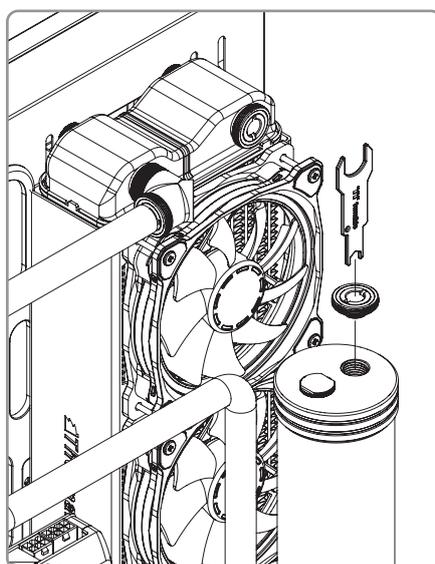

- 3** Measure the tube length based on the base part of the fitting, and make (bend) the tubes.

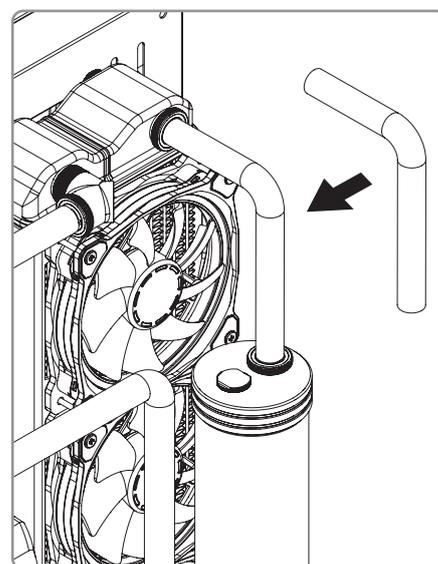


- 4** Fit the C-Pro fitting to the tube according to the order in the picture below.

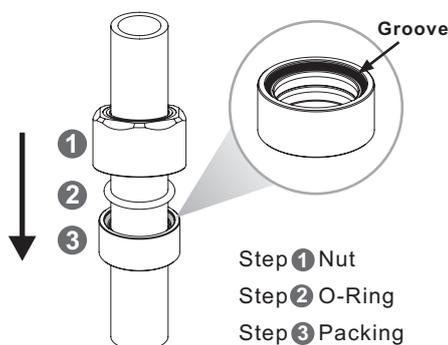

⚠ CAUTION

The O-ring and the packing with a groove on the inside diameter must always be installed towards the top of the compression nut.

- 5** Install the tubes and tight the fitting caps.

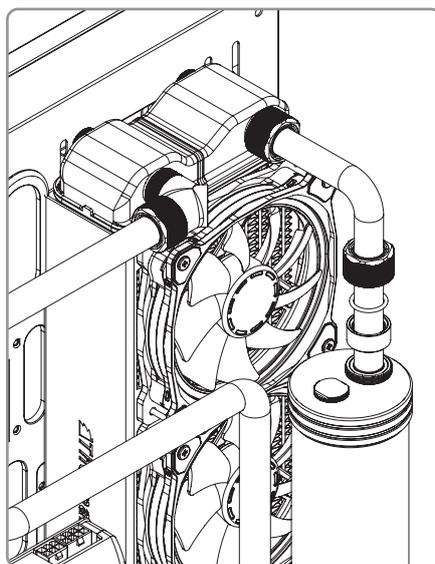

- 6** Finished!

